





Model Components	Page
Air Cleaner Group.	4
Alternator Group.	6
Blower Housing Group.	8
Carburetor and Fuel Supply Group.	10
Controls Group.	12
Crankcase Cover/Sump Group.	14
Crankshaft Group.	16
Cylinder Group.	18
Cylinder Head Group.	20
Flywheel, Ignition, and Starter Group.	24
Lubrication Group.	26

Not For
Reproduction

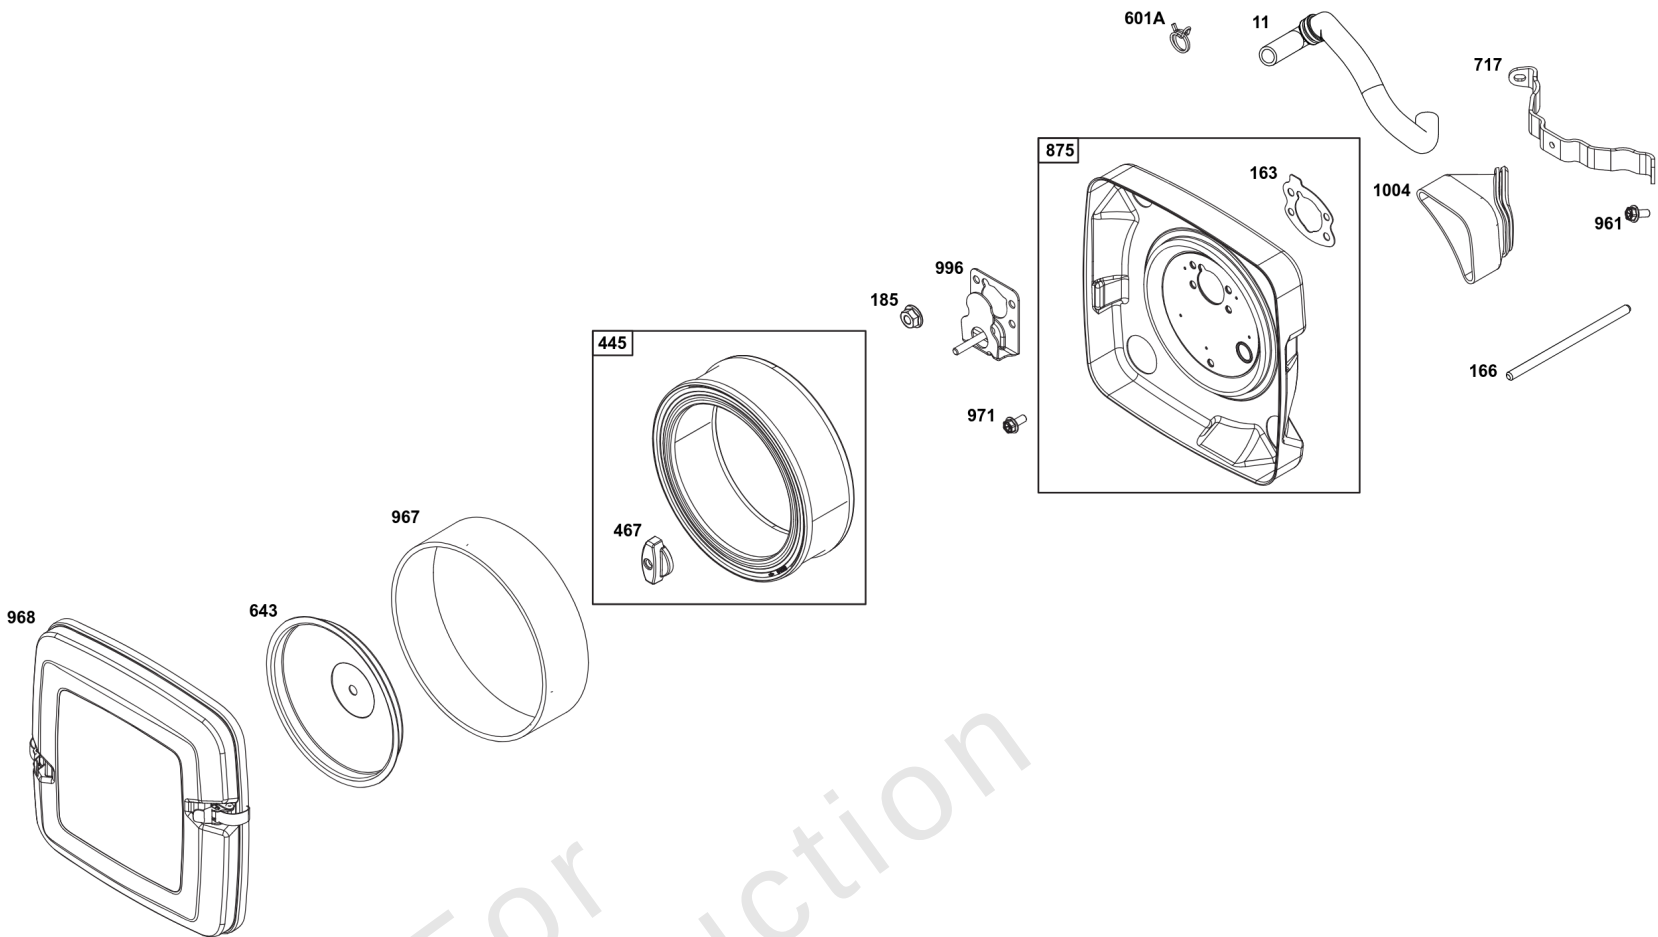


Air Cleaner Group

REF NO	PART NO	QTY	DESCRIPTION
11	844976	1	TUBE, Breather
163	-----	1	GASKET, Air Cleaner -(Part information located in Carburetor and Fuel Supply Group.)
166	844979	2	STUD -(Air Cleaner)
185	690939	2	NUT -(Air Cleaner Base)
445	394018S	1	FILTER, A/C Cartridge
467	846431	1	KNOB, Air Cleaner Cover
601A	691145	1	CLAMP, Hose
643	844932	1	RETAINER, Air Cleaner
717	692153	1	BRACKET, Air Cleaner
875	844929	1	BASE, Air Cleaner
961	807084	2	SCREW -(Air Cleaner Bracket)
967	272490S	1	FILTER, Pre Cleaner
968	699959	1	COVER, Air Cleaner
971	807084	3	SCREW -(Air Cleaner Base to Carburetor/Throttle Body)
996	844930	1	SHIELD, Carburetor
1004	842258	1	DUCT, Air

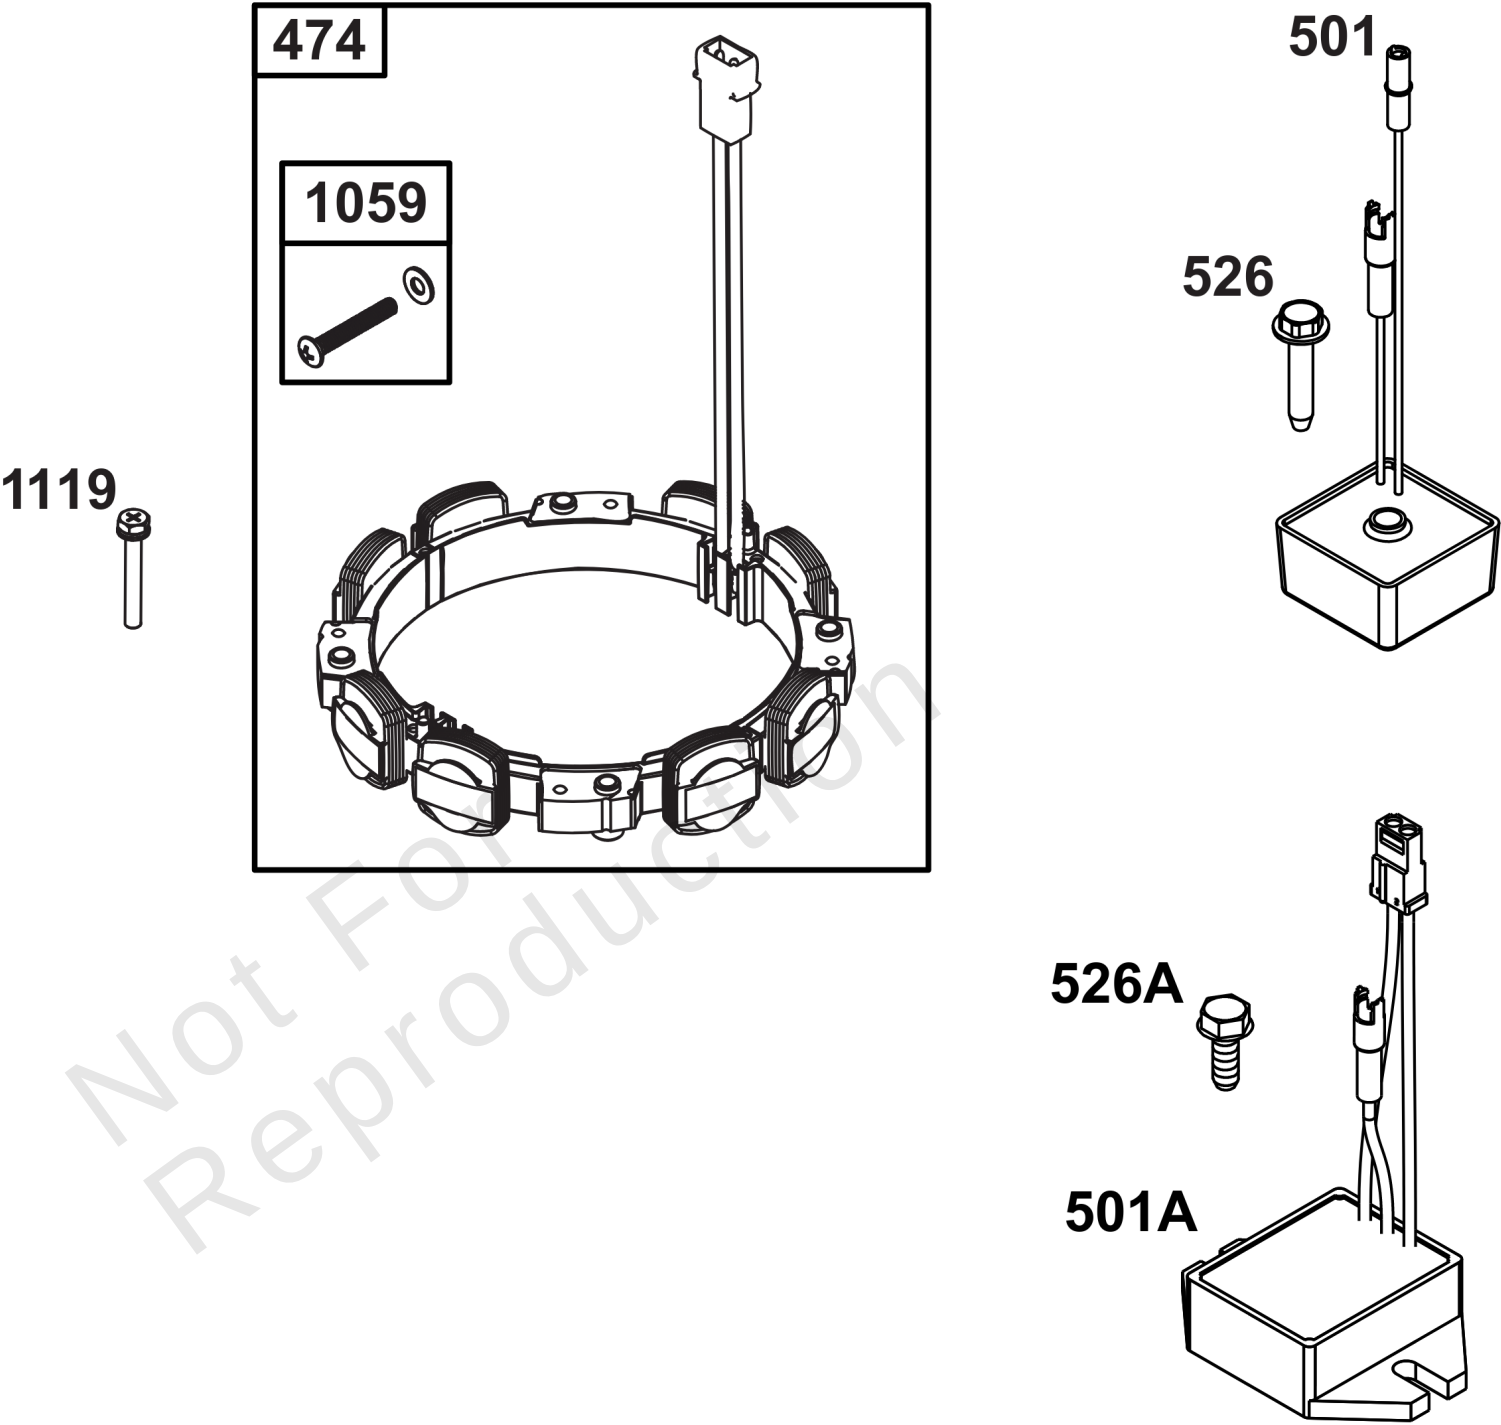


Alternator Group

REF NO	PART NO	QTY	DESCRIPTION
474	592829	1	ALTERNATOR -Used Before Code Date 22120500
474	592830	1	ALTERNATOR -Used After Code Date 22120400
501	794360	1	REGULATOR -Used Before Code Date 22120500
501A	845907	1	REGULATOR -Used After Code Date 22120400
526	690717	1	SCREW -(Regulator) -Used Before Code Date 22120500
526A	692067	2	SCREW -(Regulator) -Used After Code Date 22120400
1059	698516	4	KIT, Screw/Washer
1119	691552	4	SCREW -(Alternator)

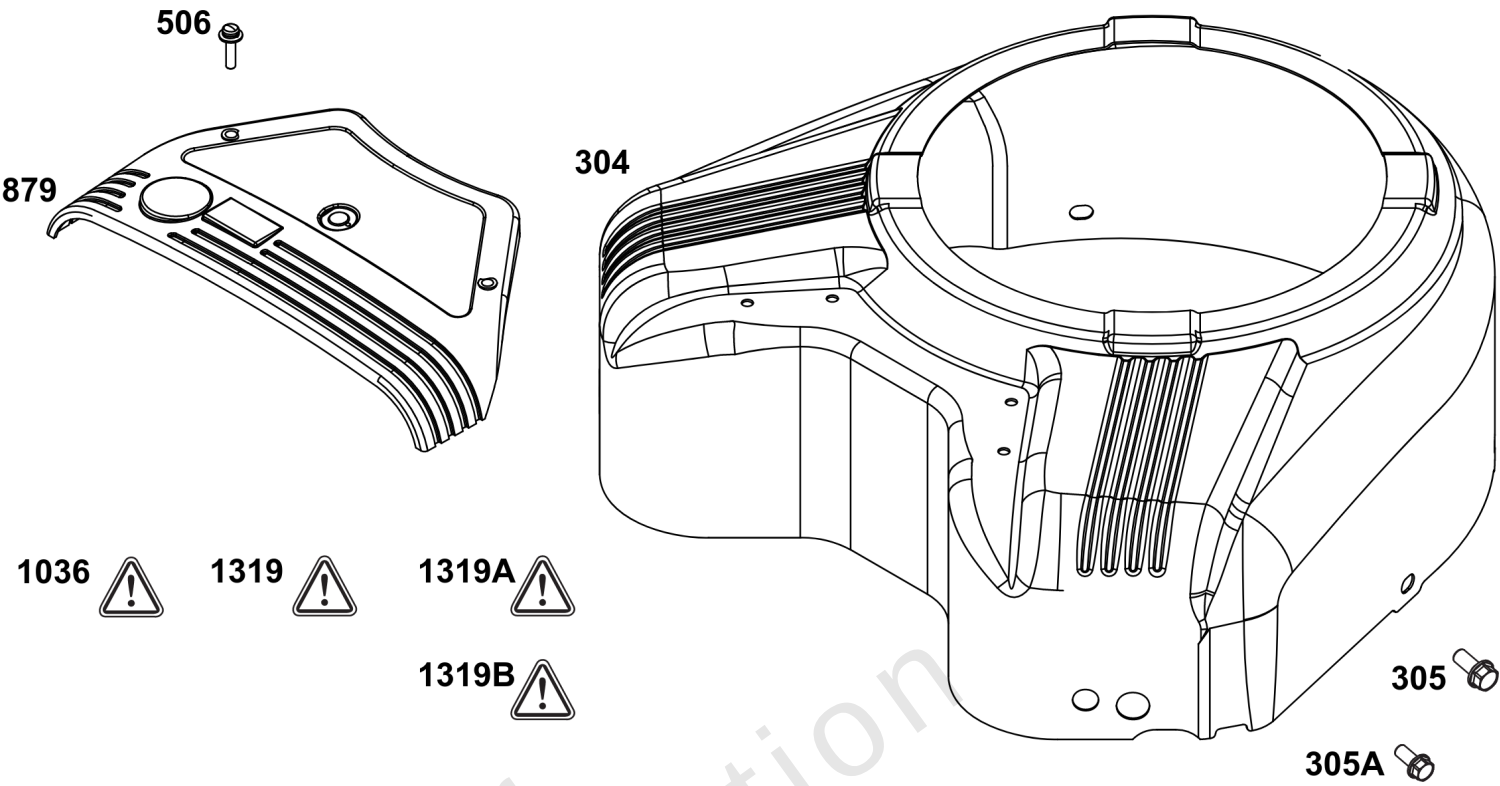


Blower Housing Group

REF NO	PART NO	QTY	DESCRIPTION
304	84003968	1	HOUSING, Blower
305	692056	3	SCREW -(Blower Housing)
305A	692062	1	SCREW -(Blower Housing)
506	807120	2	SCREW -(Carburetor/EFI Cover)
879	807118	1	COVER, Carburetor/EFI
1036	-----	1	LABEL, Emissions -(Available from a Briggs & Stratton Authorized Dealer)
1319	794467	1	LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)
1319A	797669	1	LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)
1319B	278911GS	1	LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)

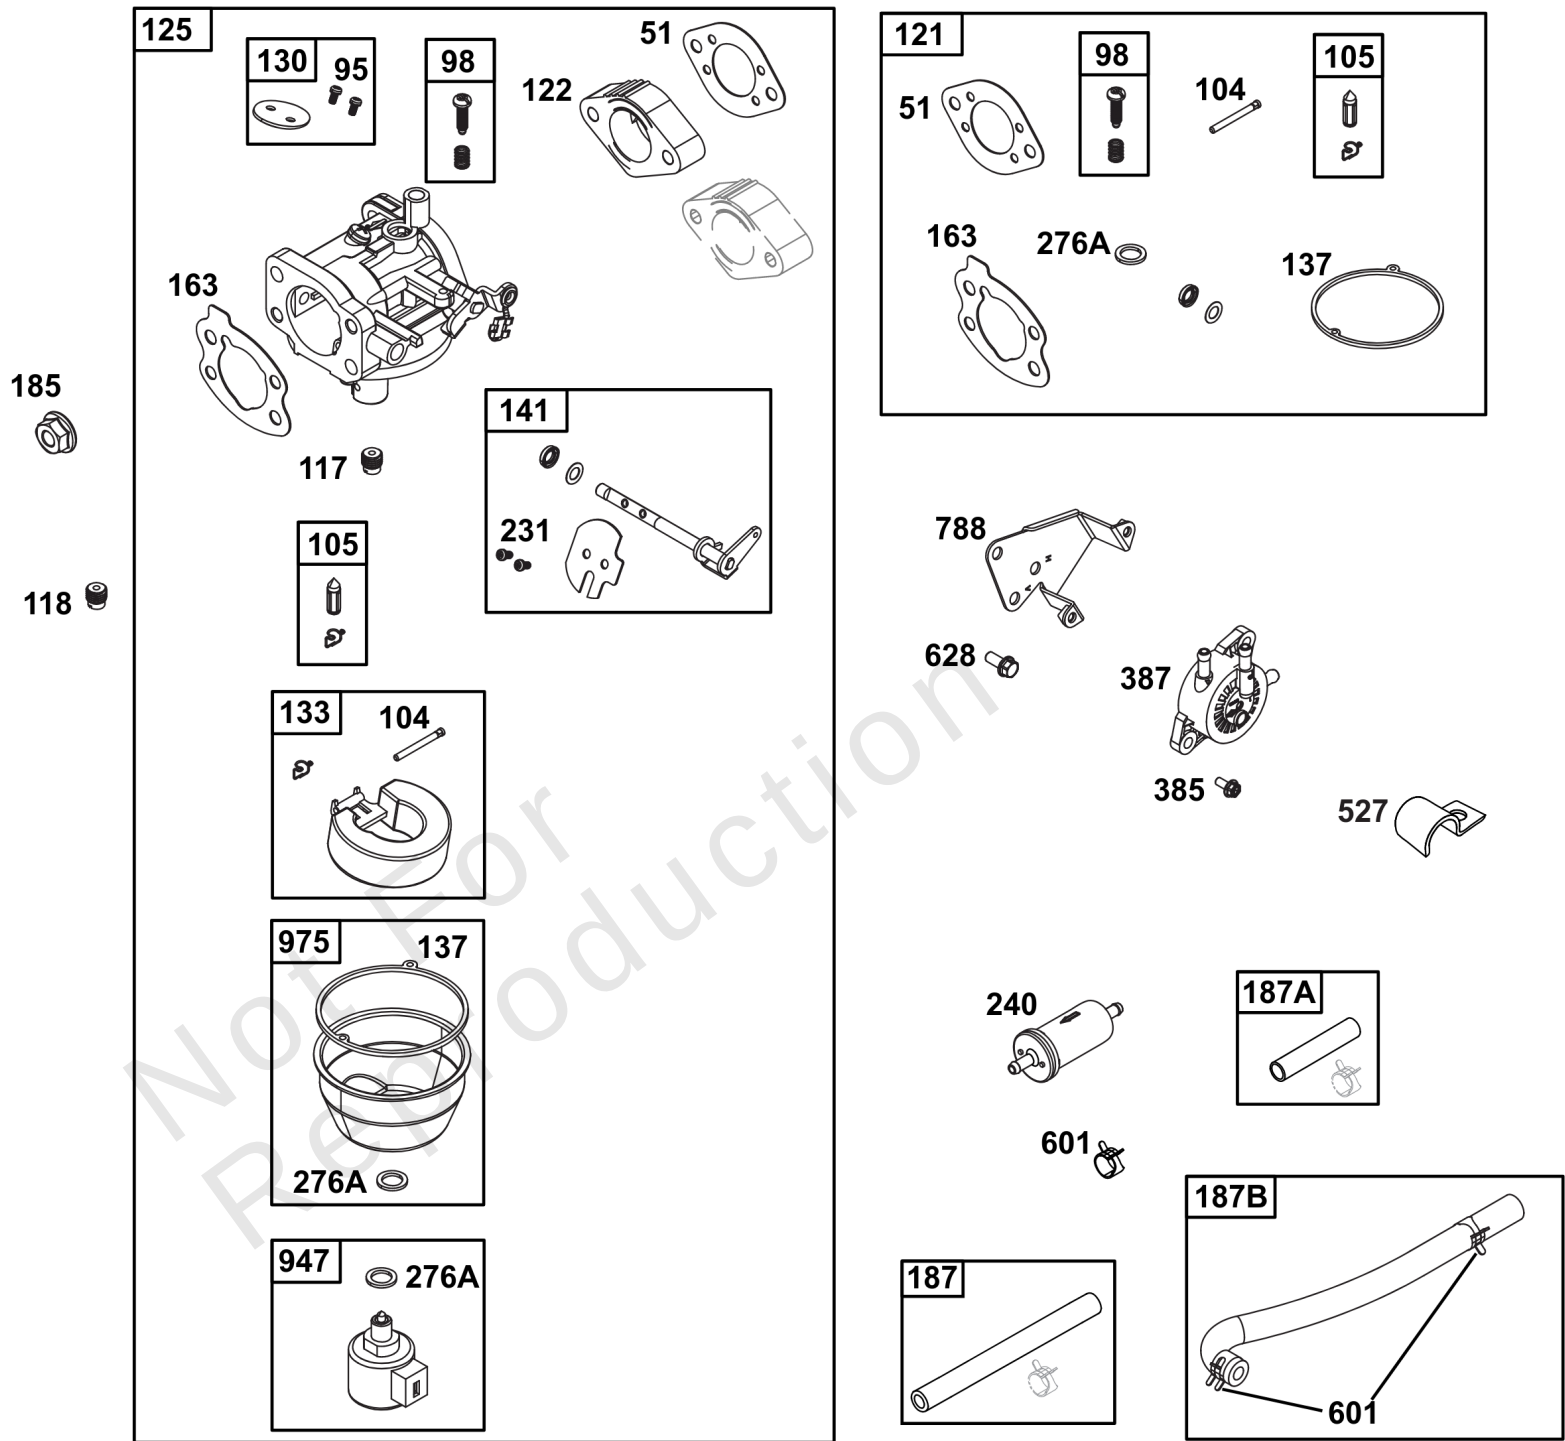




Carburetor and Fuel Supply Group

REF NO	PART NO	QTY	DESCRIPTION
51	-----	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
95	846644	2	SCREW -(Throttle Valve)
98	846649	1	KIT, Idle Speed
104	846646	1	PIN, Float Hinge
105	846643	1	VALVE, Float Needle
117	846647	1	JET, Main -(Standard)
118	846590	1	JET, Main -(High Altitude)
121	847318	1	KIT, Carburetor Overhaul -(Service Kits may include extra parts not specific to this engine.)
122	847048	1	SPACER, Carburetor
125	847050	1	CARBURETOR
130	846638	1	VALVE, Throttle
133	846645	1	FLOAT, Carburetor
137	846642	1	GASKET, Float Bowl
141	846637	1	KIT, Choke Shaft
163	844931	2	GASKET, Air Cleaner
185	690939	2	NUT -(Part information located in Air Cleaner Group.)
187	791766	1	LINE, Fuel
187A	791880	1	HOSE, Vacuum
187B	846584	1	LINE, Fuel
231	846644	2	SCREW -(Choke Valve)
240	845125	1	FILTER, Fuel
276A	846640	1	WASHER, Sealing
385	807084	2	SCREW -(Fuel Pump)
387	597338	1	PUMP, Fuel
527	690423	1	CLAMP, Tube
601	691038	6	CLAMP, Hose
628	806660	1	SCREW -(Fuel Pump Bracket)
788	691559	1	BRACKET, Fuel Pump
947	846639	1	SOLENOID, Fuel
975	846641	1	BOWL, Float

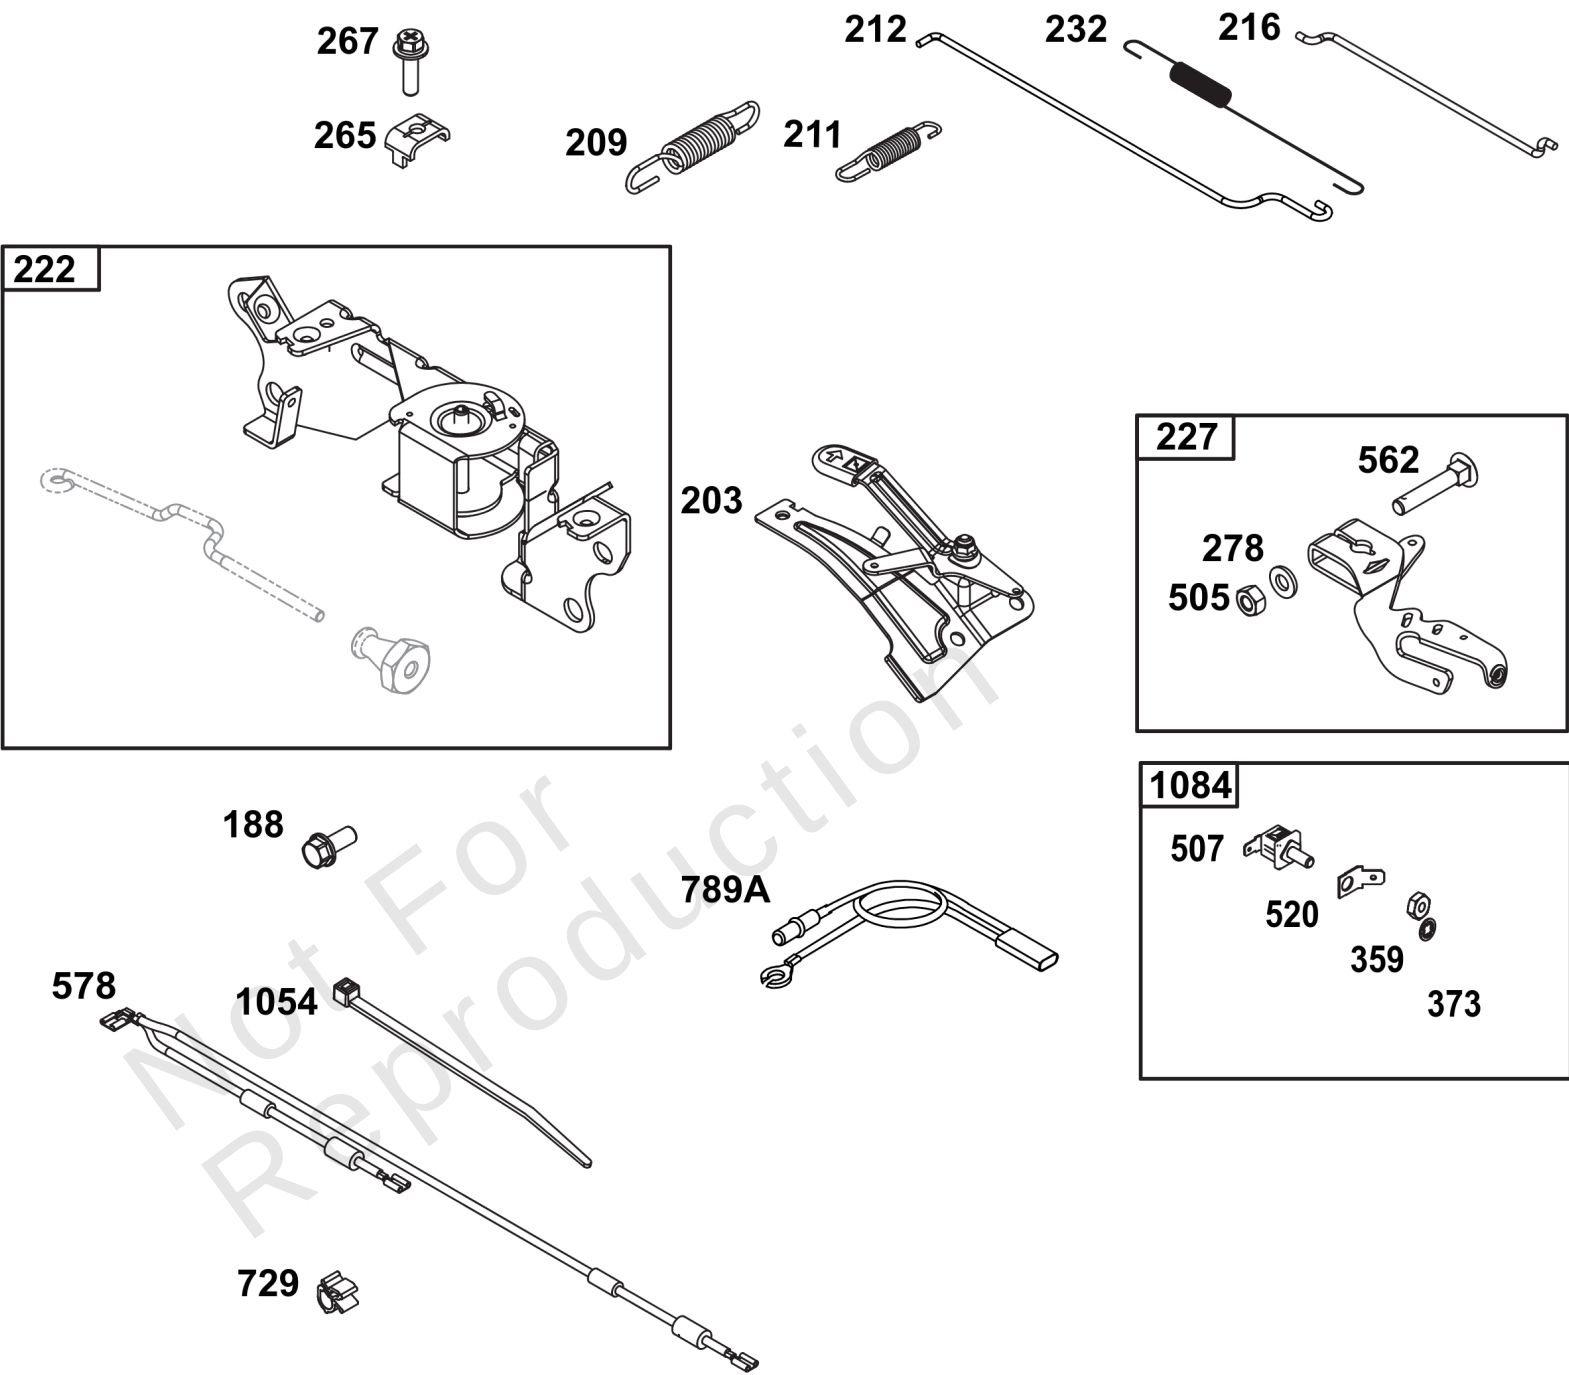


Controls Group

REF NO	PART NO	QTY	DESCRIPTION
188	692062	4	SCREW -(Control Bracket)
203	808753	1	CRANK, Bell
209	692071	1	SPRING, Governor
211	692069	1	SPRING, Governed Idle
212	847015	1	LINK, Throttle
216	847031	1	LINK, Choke
222	808454	1	BRACKET, Control
227	690236	1	LEVER, Governor Control
232	692073	1	SPRING, Governor Link
265	691024	3	CLAMP, Casing
267	841552	3	SCREW -(Casing Clamp)
278	842122	1	WASHER -(Governor Control Lever)
359	691077	1	WASHER -(Ground Terminal)
373	845823	1	NUT -(Ground Terminal)
505	844752	1	NUT -(Governor Control Lever)
507	691972	1	INSULATOR
520	691084	1	TERMINAL, Ground
562	690239	1	BOLT -(Governor Control Lever)
578	844547	1	HARNESS, Wiring
729	593826	1	CLIP, Wire
789A	844914	1	HARNESS, Wiring
1054	280275	2	TIE, Cable
1084	848341	1	CONNECTOR, Terminal

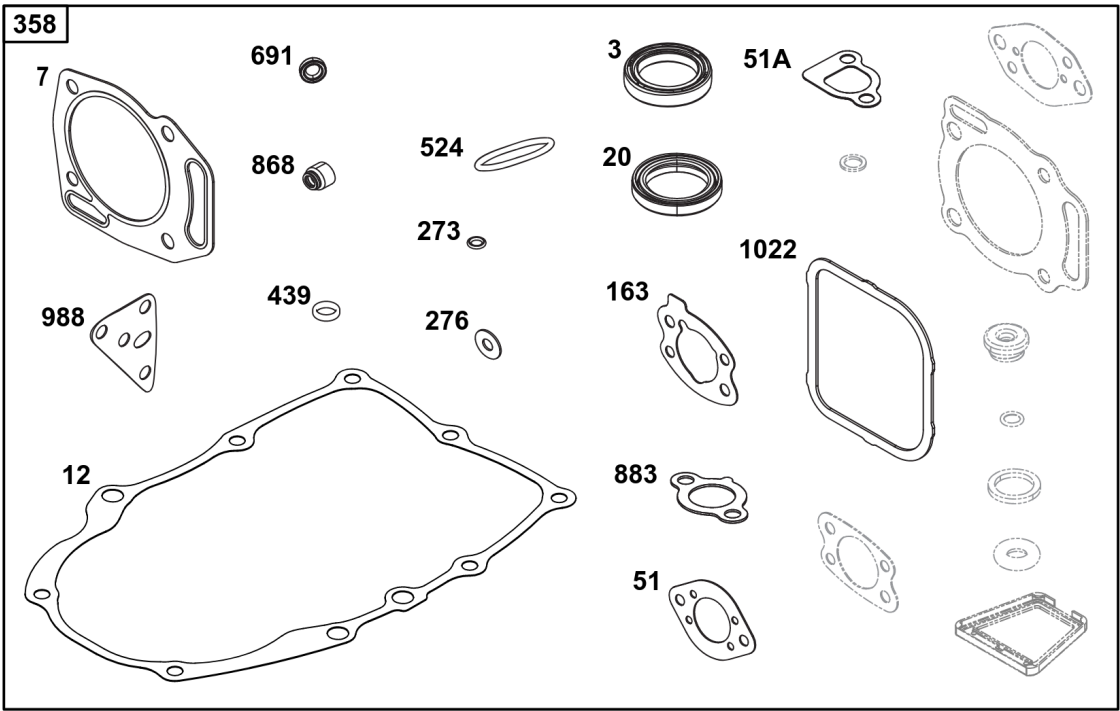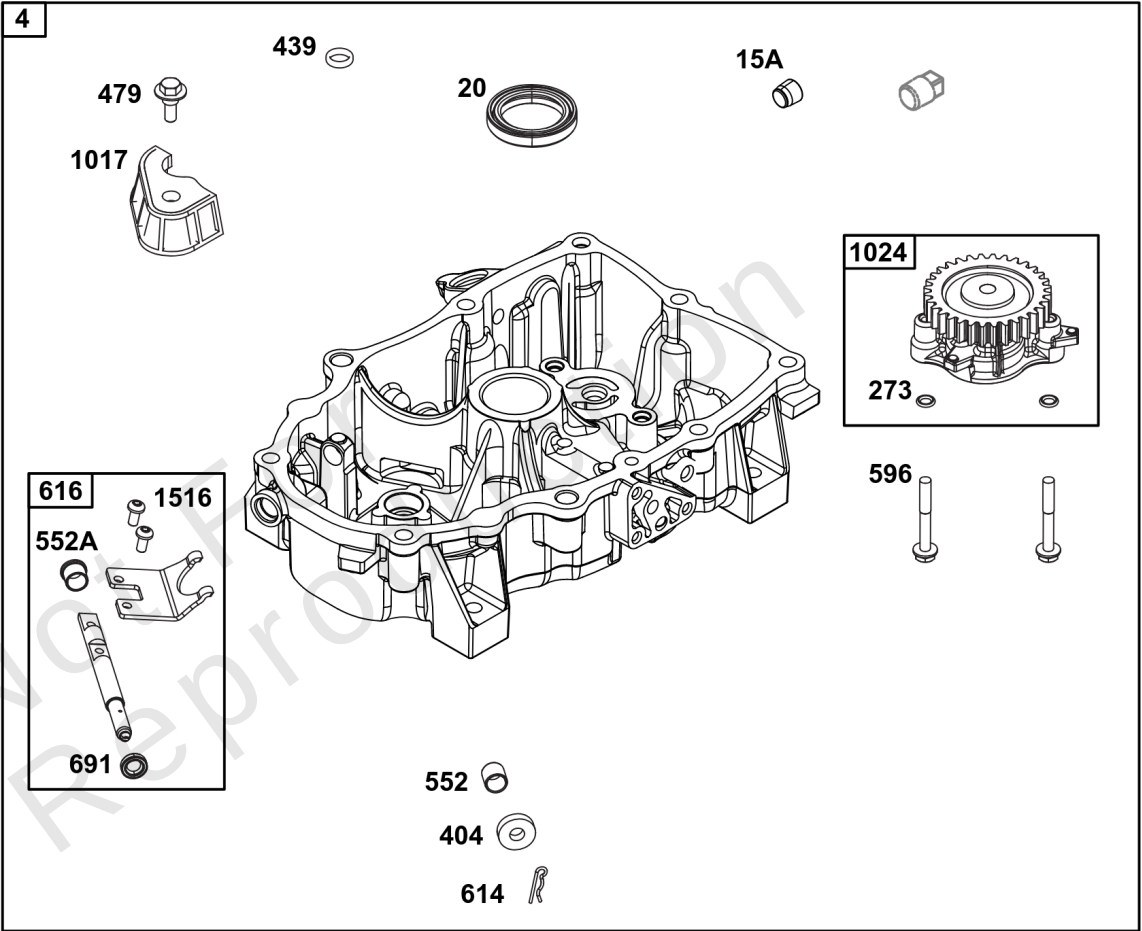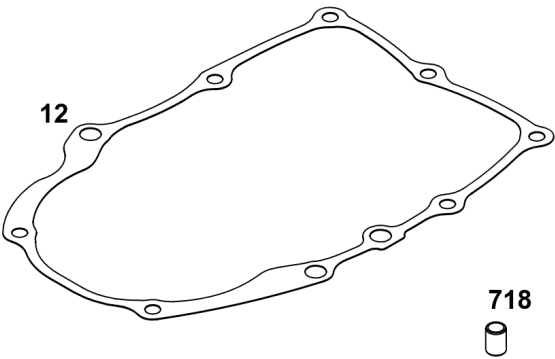



Crankcase Cover/Sump Group

REF NO	PART NO	QTY	DESCRIPTION
3	-----	1	SEAL, Oil -(Part information located in Cylinder Group.)
4	84002118	1	COVER, Crankcase
7	-----	2	GASKET, Cylinder Head -(Part information located in Cylinder Head Group.)
12	846487	1	GASKET, Crankcase
15A	691680		PLUG, Oil Drain
20	805049S	1	SEAL, Oil -(PTO Side)
22	807362	8	SCREW -(Crankcase Cover/Sump)
51	-----	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
51A	-----	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
163	-----	1	GASKET, Air Cleaner -(Part information located in Carburetor and Fuel Supply Group.)
273	-----	2	SEAL, O-Ring -(Part information located in Lubrication Group.)
276	-----	4	WASHER, Sealing -(Part information located in Cylinder Head Group.)
358	-----	1	GASKET SET, Engine -(Part information located in Cylinder Group.)
404	690704	1	WASHER -(Governor Crank)
439	692154	1	O-RING, Oil Gallery -(Crankcase Cover/Sump or Cylinder Assembly)
479	-----	1	SCREW -(Part information located in Lubrication Group.)
524	-----	1	SEAL, O-Ring -(Part information located in Lubrication Group.)
552	690701	1	BUSHING, Governor Crank
552A	806686	1	BUSHING, Governor Crank
596	-----	2	SCREW -(Part information located in Lubrication Group.)
614	691550	1	PIN, Cotter
616	806685	1	CRANK, Governor
691	842826	1	SEAL, Governor Shaft
718	806469	2	PIN, Locating
868	-----	2	SEAL, Valve -(Part information located in Cylinder Head Group.)
883	-----	2	GASKET, Exhaust -(Part information located in Cylinder Head Group.)
988	-----	1	GASKET, Oil Adapter -(Part information located in Lubrication Group.)
1017	-----	1	SCREEN, Oil Pump -(Part information located in Lubrication Group.)
1022	-----	2	GASKET, Rocker Cover -(Part information located in Cylinder Head Group.)
1024	-----	1	PUMP, Oil -(Part information located in Lubrication Group.)
1516	846459	2	SCREW -(Governor Crank)

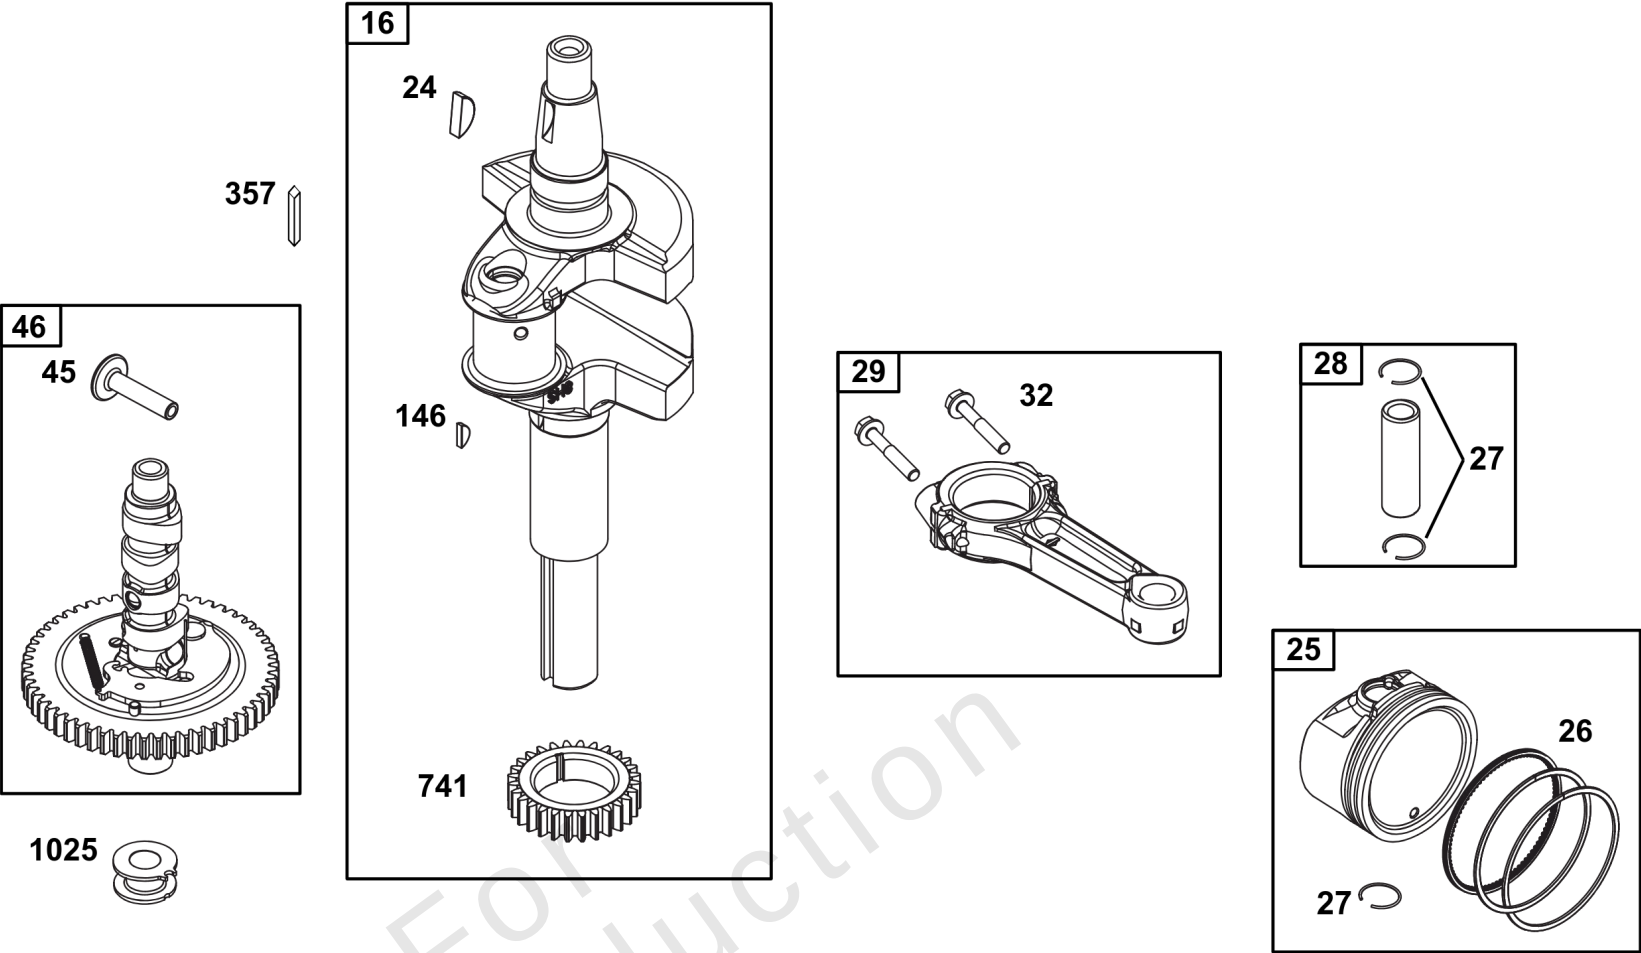


Crankshaft Group

REF NO	PART NO	QTY	DESCRIPTION
16	84004522	1	CRANKSHAFT
24	808095	1	KEY, Flywheel
25	843792	2	PISTON ASSEMBLY
25	843821	2	PISTON ASSEMBLY -(.020" Oversize)
26	843793	2	SET, Ring
26	843822	2	SET, Ring -(.020" Oversize)
27	690683	4	LOCK, Piston Pin
28	844541	2	PIN, Piston
29	807900S	2	ROD, Connecting
32	690698	4	SCREW -(Connecting Rod)
45	-----	4	TAPPET, Valve -(Part information located in Cylinder Head Group.)
46	845649	1	CAMSHAFT
146	691639	1	KEY, Woodruff
357	691483	1	KEY, Drive Pulley
741	846085	1	GEAR, Timing
1025	690689	1	SPOOL, Governor

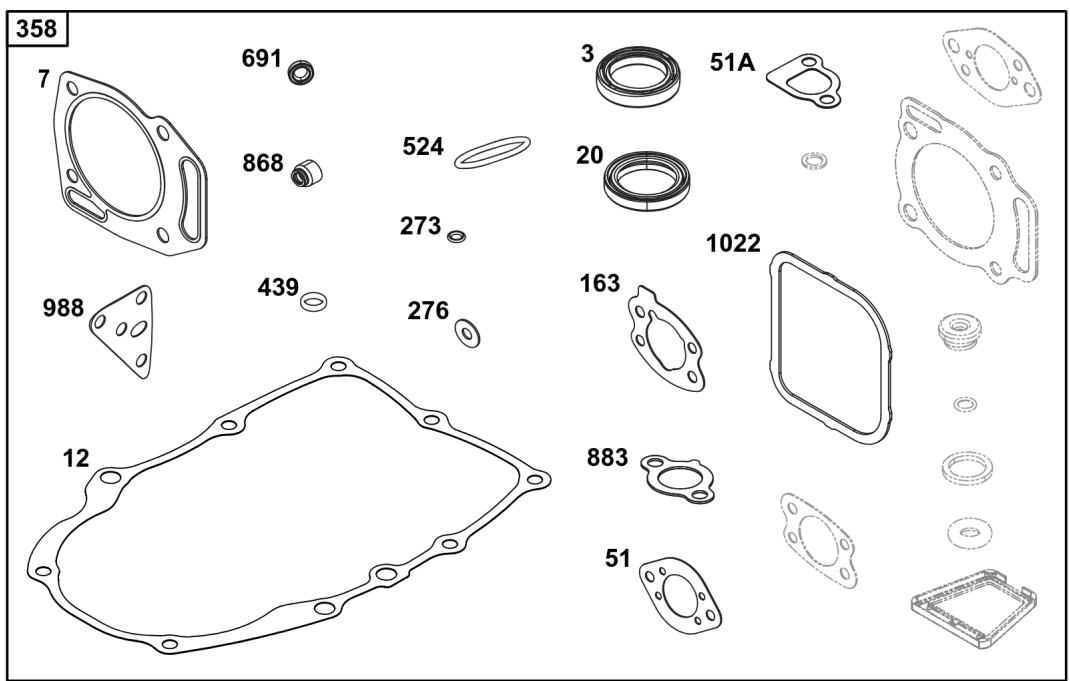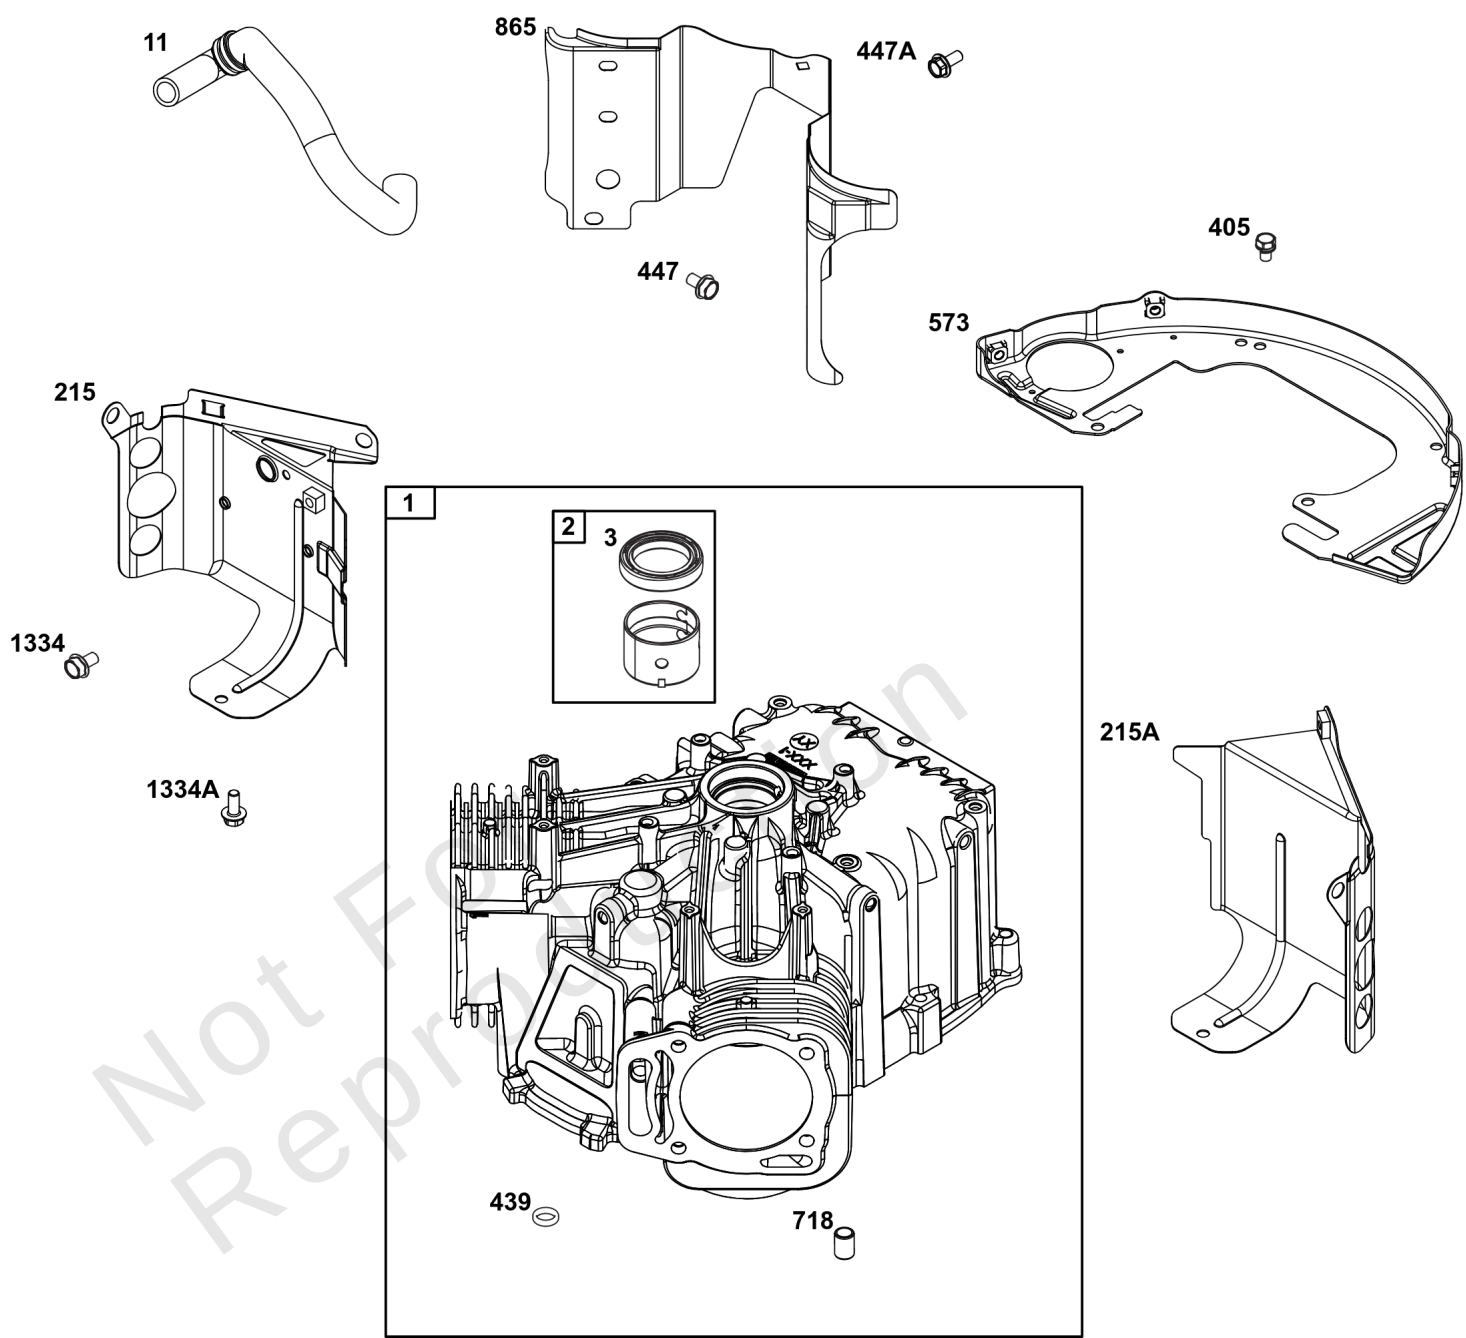


Cylinder Group

REF NO	PART NO	QTY	DESCRIPTION
1	84004620	1	CYLINDER ASSEMBLY
2	808534	1	KIT, Bushing/Seal -(Magneto Side)
3	805101S	1	SEAL, Oil -(Magneto Side)
7	-----	2	GASKET, Cylinder Head -(Part information located in Cylinder Head Group.)
11	-----	1	TUBE, Breather -(Part information located in Air Cleaner Group.)
12	-----	1	GASKET, Crankcase -(Part information located in Crankcase Cover/Sump Group.)
20	-----	1	SEAL, Oil -(Part information located in Crankcase Cover/Sump Group.)
51	-----	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
51A	-----	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
163	-----	1	GASKET, Air Cleaner -(Part information located in Carburetor and Fuel Supply Group.)
215	841183	1	GUIDE, Air
215A	841182	1	GUIDE, Air
273	-----	2	SEAL, O-Ring -(Part information located in Lubrication Group.)
276	-----	4	WASHER, Sealing -(Part information located in Cylinder Head Group.)
358	84006856	1	GASKET SET, Engine -(Service Kits may include extra parts not specific to this engine.)
405	807163	4	SCREW -(Back Plate)
439	-----	1	O-RING, Oil Gallery -(Part information located in Crankcase Cover/Sump Group.)
447	841233	2	SCREW -(Air Guide Cover)
447A	807084	2	SCREW -(Air Guide Cover)
524	-----	1	SEAL, O-Ring -(Part information located in Lubrication Group.)
573	841310	1	PLATE, Back
691	-----	1	SEAL, Governor Shaft -(Part information located in Crankcase Cover/Sump Group.)
718	-----	2	PIN, Locating -(Part information located in Crankcase Cover/Sump Group.)
865	843768	1	COVER, Air Guide
868	-----	2	SEAL, Valve -(Part information located in Cylinder Head Group.)
883	-----	2	GASKET, Exhaust -(Part information located in Cylinder Head Group.)
988	-----	1	GASKET, Oil Adapter -(Part information located in Lubrication Group.)
1022	-----	2	GASKET, Rocker Cover -(Part information located in Cylinder Head Group.)
1334	841233	3	SCREW -(Air Guide)
1334A	807084	1	SCREW -(Air Guide)

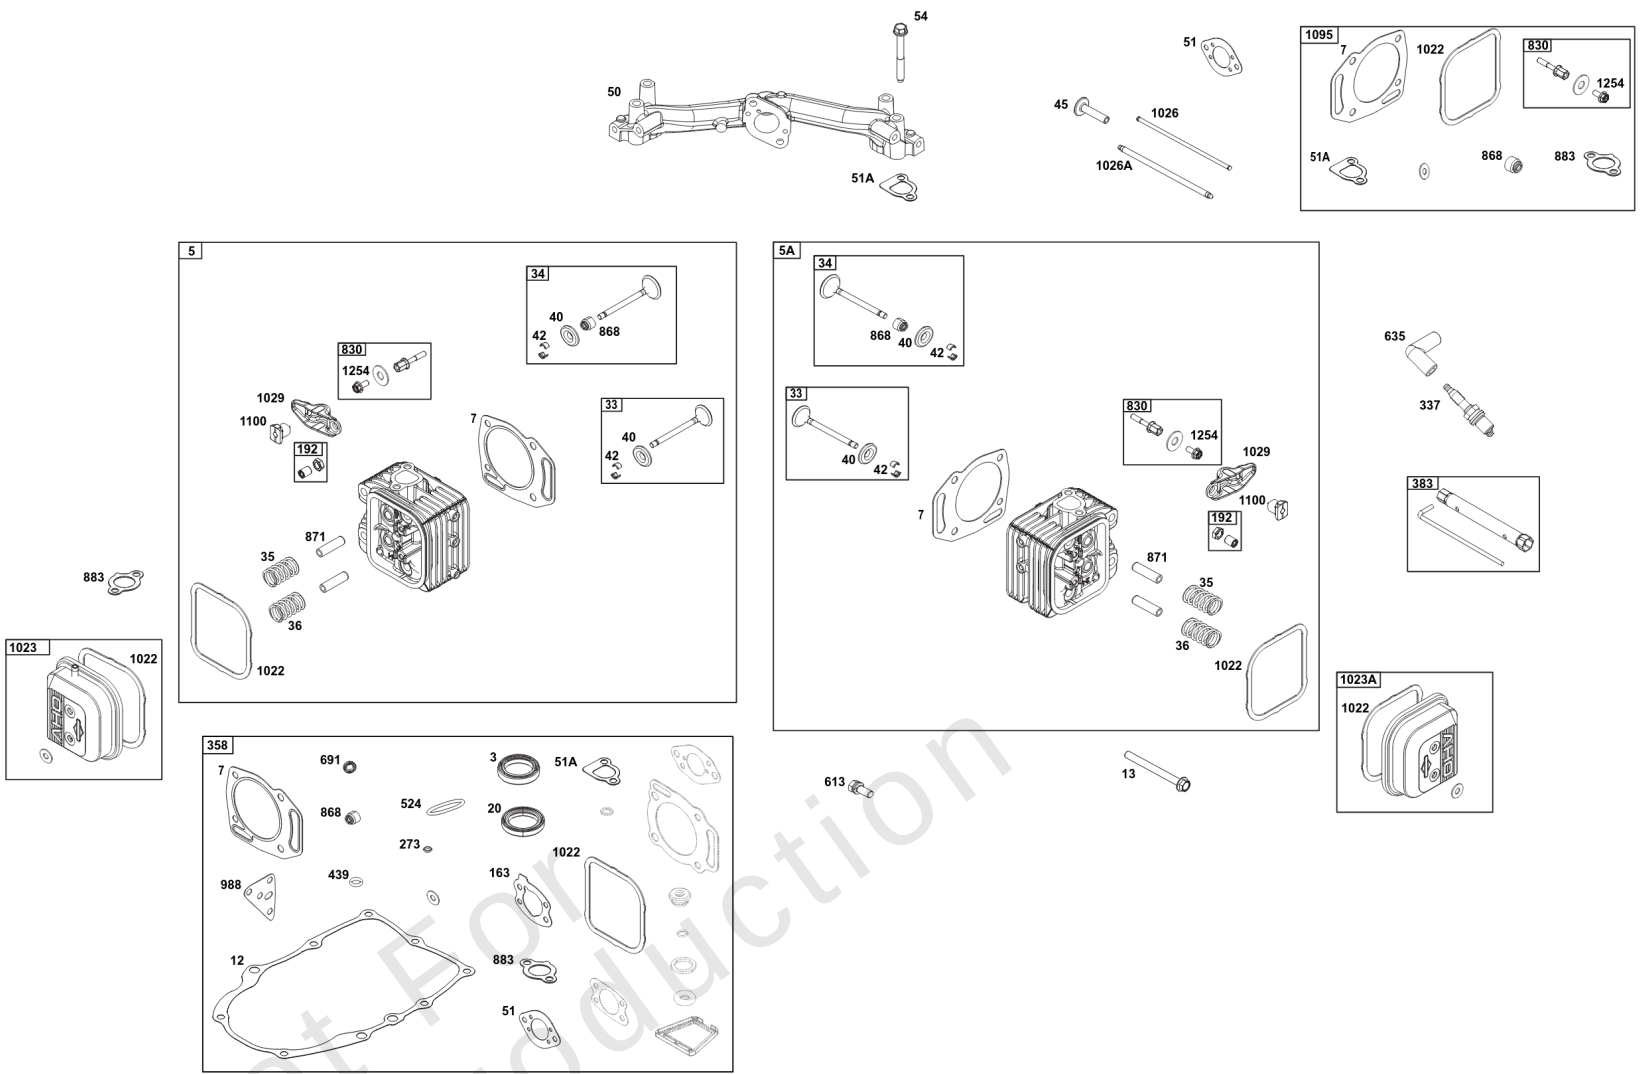

Cylinder Head Group


REF NO	PART NO	QTY	DESCRIPTION
3	-----	1	SEAL, Oil -(Part information located in Cylinder Group.)
5	84002674	1	HEAD, Cylinder
5A	84002675	1	HEAD, Cylinder
7	845884	2	GASKET, Cylinder Head
12	-----	1	GASKET, Crankcase -(Part information located in Crankcase Cover/Sump Group.)
13	692059	8	SCREW -(Cylinder Head)
20	-----	1	SEAL, Oil -(Part information located in Crankcase Cover/Sump Group.)
33	808687	2	VALVE, Exhaust
34	807680	2	VALVE, Intake
35	692084	2	SPRING, Valve -(Intake)
36	692084	2	SPRING, Valve -(Exhaust)
40	692058	4	RETAINER, Valve
42	807683	4	KEEPER, Valve
45	843379	4	TAPPET, Valve
50	690754	1	MANIFOLD, Intake
51	846597	2	GASKET, Intake
51A	692035	2	GASKET, Intake
54	846604	4	SCREW -(Intake Manifold)
163	-----	1	GASKET, Air Cleaner -(Part information located in Carburetor and Fuel Supply Group.)
192	807623	4	ADJUSTER, Rocker Arm
273	-----	2	SEAL, O-Ring -(Part information located in Lubrication Group.)
337	792015	2	PLUG, Spark
358	-----	1	GASKET SET, Engine -(Part information located in Cylinder Group.)
383	19576S	1	WRENCH, Spark Plug
439	-----	1	O-RING, Oil Gallery -(Part information located in Crankcase Cover/Sump Group.)
524	-----	1	SEAL, O-Ring -(Part information located in Lubrication Group.)
613	691902	4	SCREW -(Muffler)
635	84005066	2	BOOT, Spark Plug
691	-----	1	SEAL, Governor Shaft -(Part information located in Crankcase Cover/Sump Group.)
830	809157	4	STUD, Rocker Arm
868	691963	2	SEAL, Valve
871	84002672	4	BUSHING, Valve Guide
883	-----	2	GASKET, Exhaust -(Part information located in Cylinder Head Group.)
883	691613	2	GASKET, Exhaust
988	-----	1	GASKET, Oil Adapter -(Part information located in Lubrication Group.)
1022	806039S	2	GASKET, Rocker Cover
1023	691558	1	COVER, Rocker
1023A	843750	1	COVER, Rocker
1026	691836	2	ROD, Push
1026A	691758	2	ROD, Push

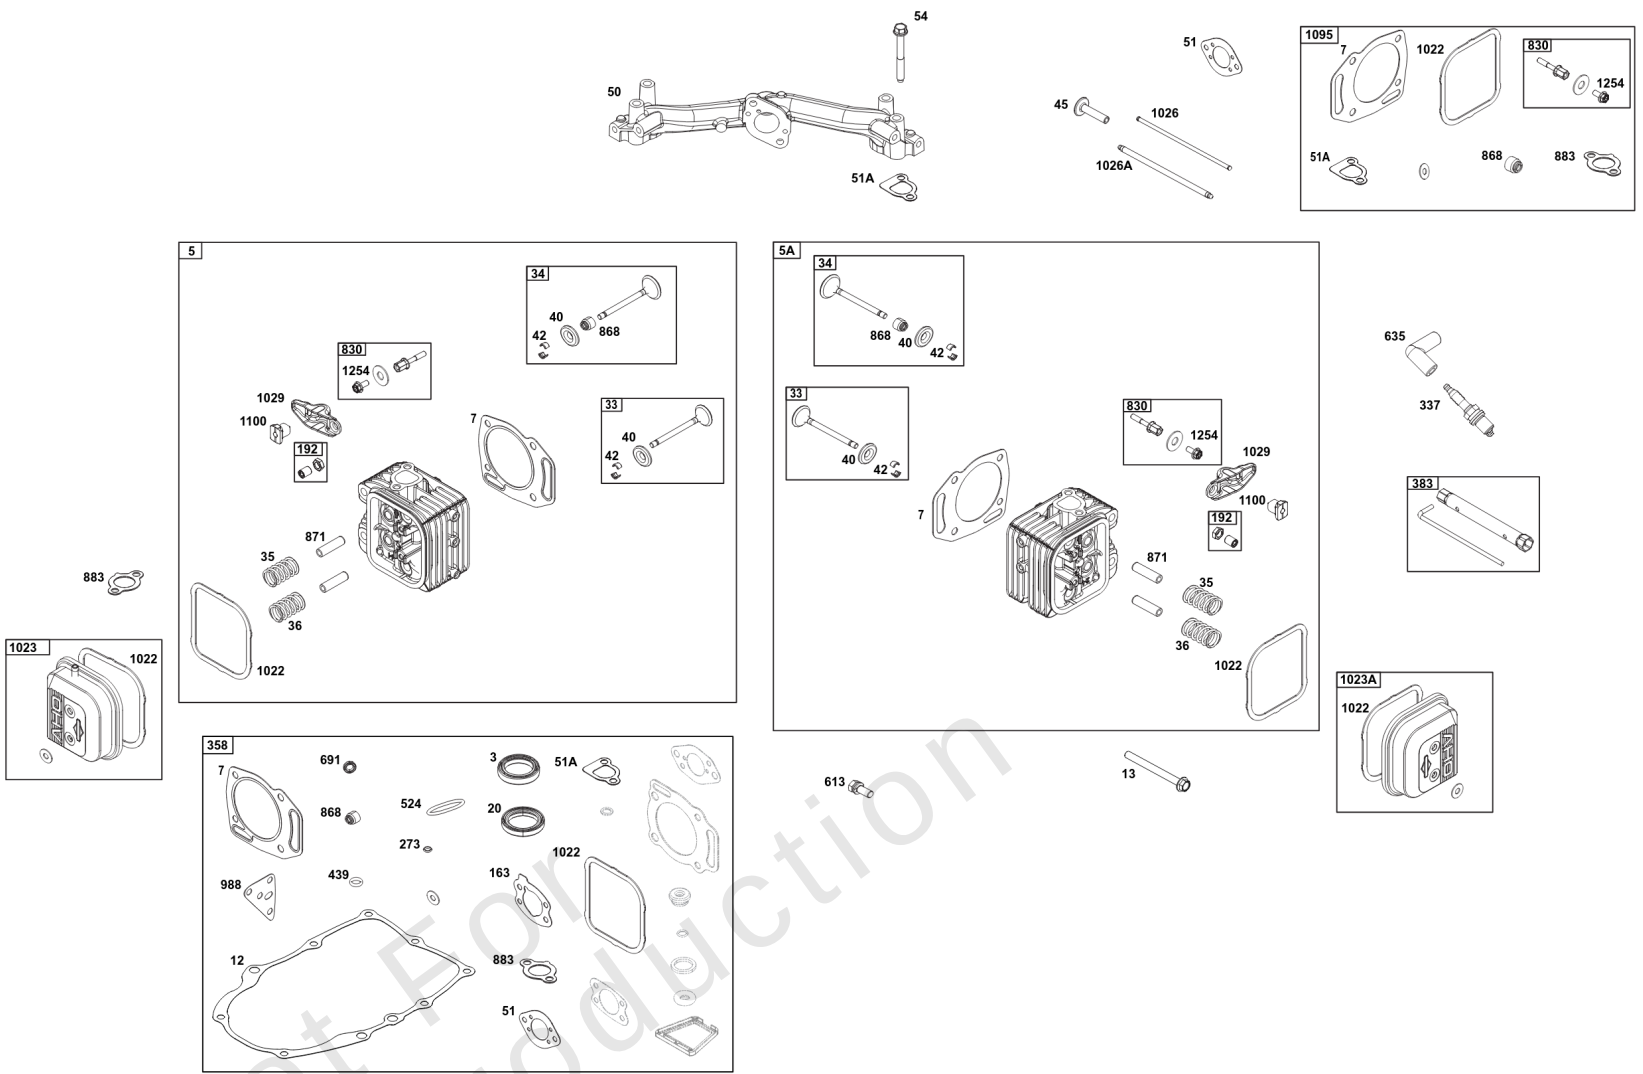

Cylinder Head Group


REF NO	PART NO	QTY	DESCRIPTION
1029	807323	4	ARM, Rocker
1095	841191	1	GASKET SET, Valve -(Service Kits may include extra parts not specific to this engine.)
1100	791959	4	PIVOT, Rocker Arm
1254	807084	4	SCREW -(Rocker Arm Stud)

Not For Reproduction

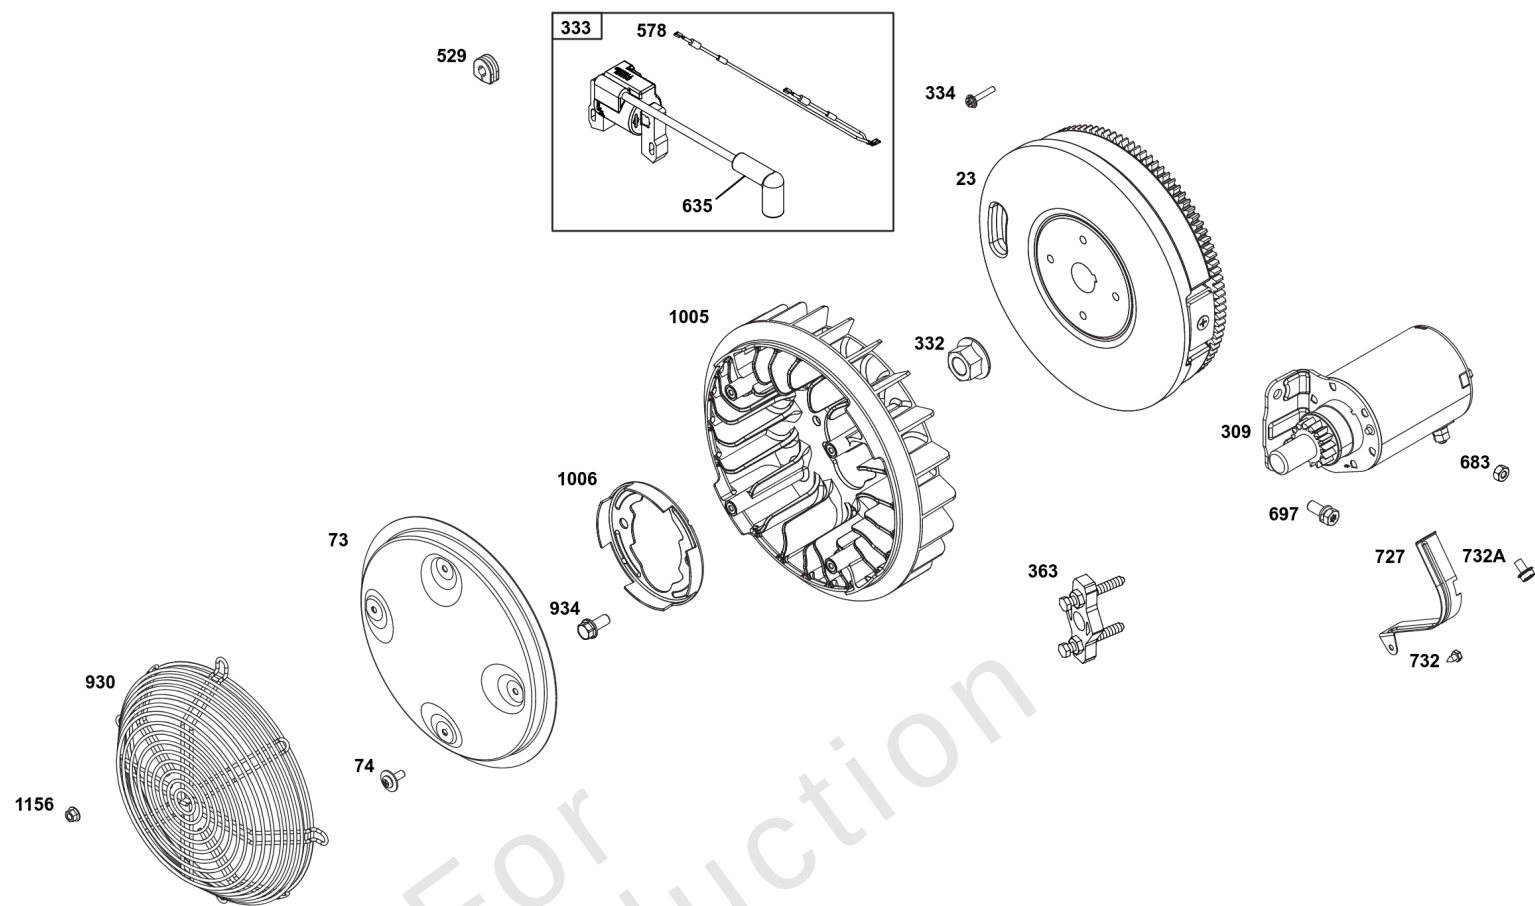

Flywheel, Ignition, and Starter Group

REF NO	PART NO	QTY	DESCRIPTION
23	841050	1	FLYWHEEL ASSEMBLY
73	841440	1	SCREEN, Rotating
74	841441	4	SCREW -(Rotating Screen)
309	846451	1	MOTOR, Starter
332	690887	1	NUT -(Flywheel)
333	84003819	2	ARMATURE, Magneto
334	692066	4	SCREW -(Magneto Armature)
363	19203	1	PULLER, Flywheel
529	690744	2	GROMMET
578	-----	1	WIRE ASSEMBLY -(Part information located in Controls Group.)
635	-----	2	BOOT, Spark Plug -(Part information located in Cylinder Head Group.)
683	691029	1	NUT -(Starter Solenoid)
697	691902	2	SCREW -(Starter Motor) (Drive Cap)
727	841313	1	COVER, Starter Drive
732	690688	1	SCREW -(Starter Drive Cover)
732A	841233	1	SCREW -(Starter Drive Cover)
930	846284	1	GUARD, Flywheel Fan
934	692062	2	SCREW -(Fan Retainer)
1005	841439	1	FAN, Flywheel
1006	690452	1	RETAINER, Fan
1156	690939	4	NUT -(Flywheel Guard)

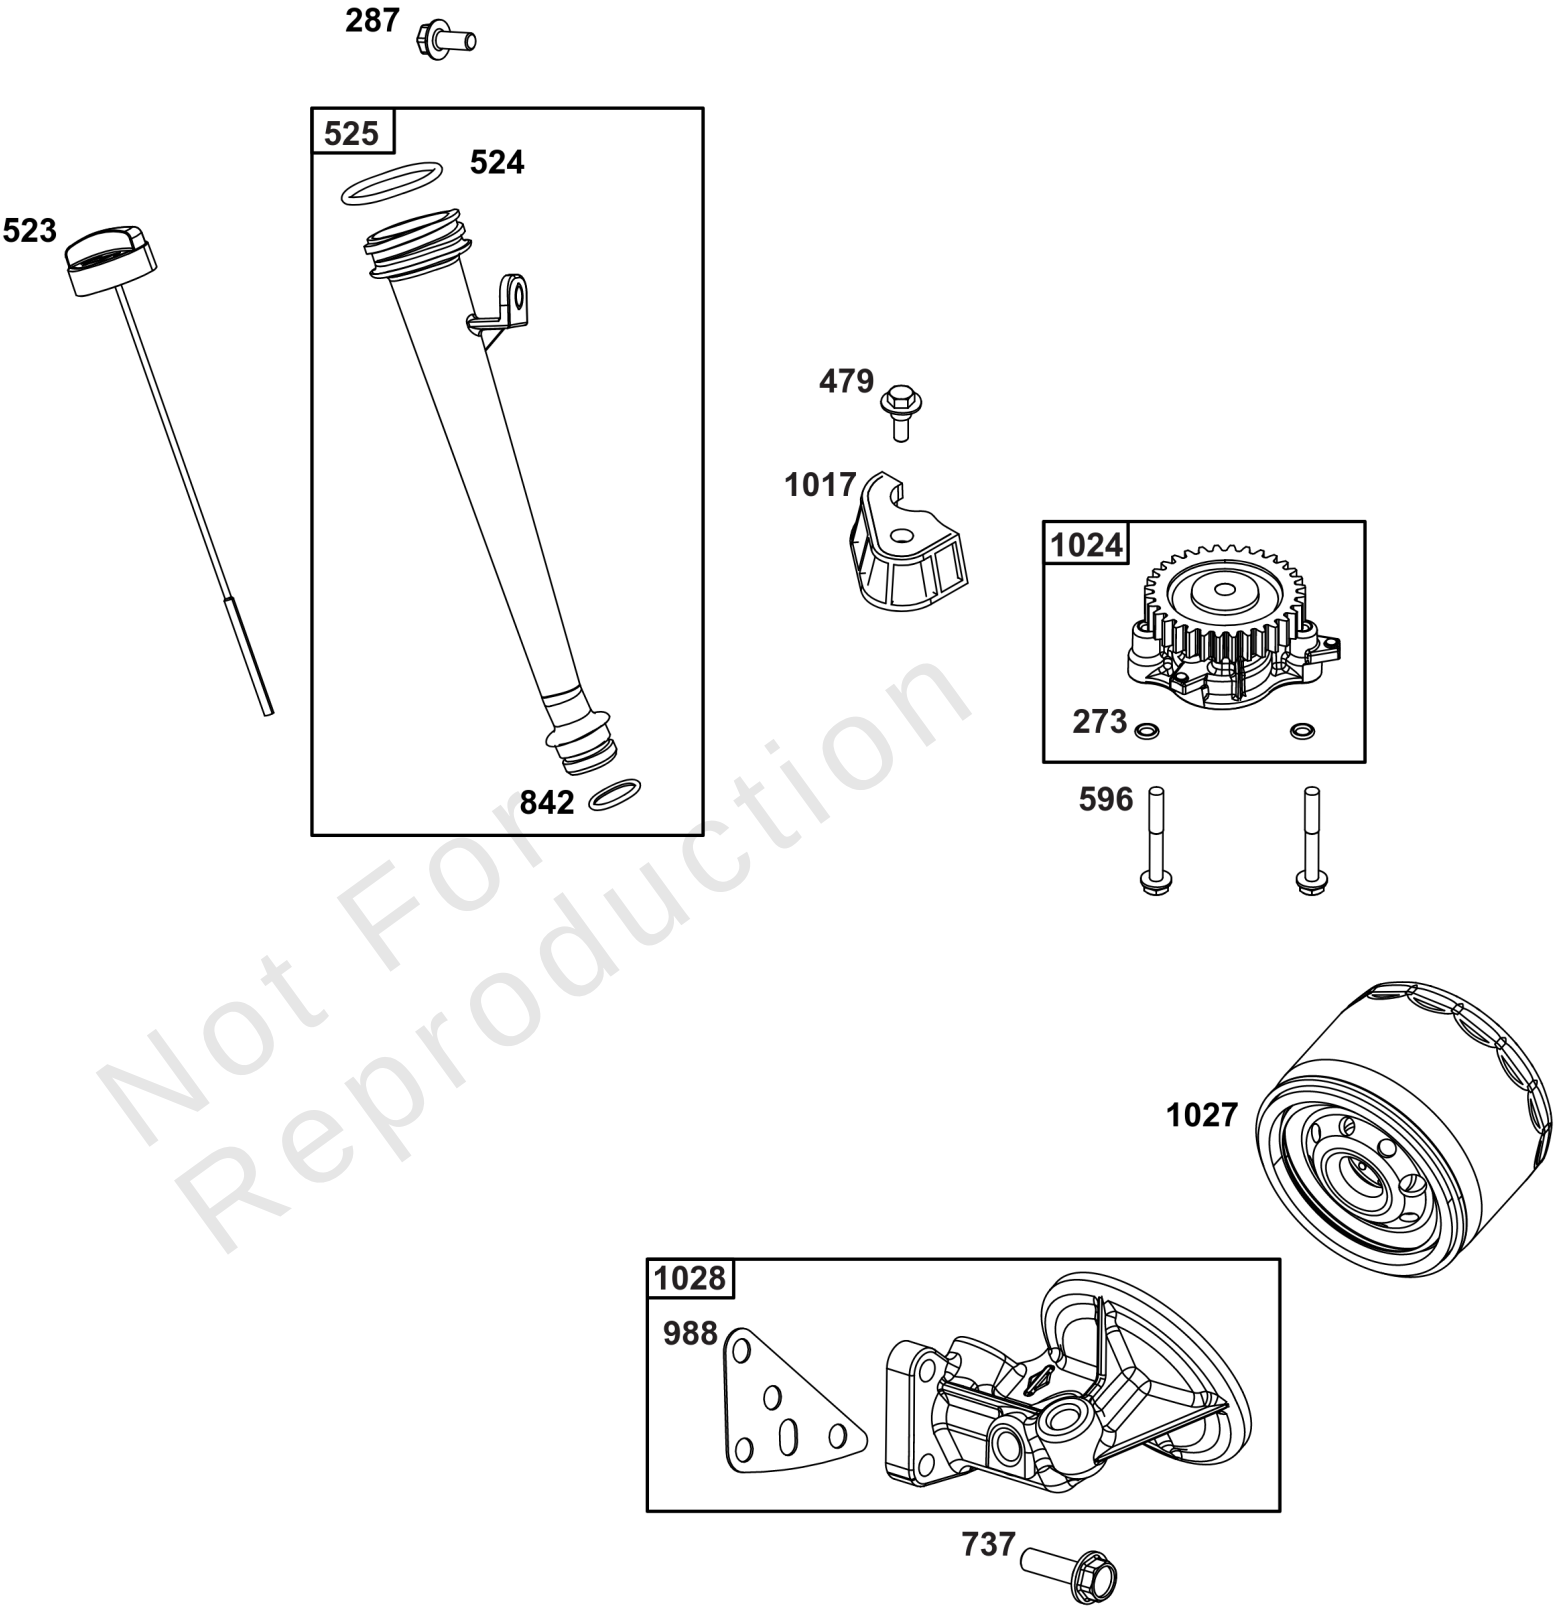

Lubrication Group

REF NO	PART NO	QTY	DESCRIPTION
273	690681	2	SEAL, O-Ring -(Oil Pump)
287	807084	1	SCREW -(Dipstick Tube)
479	843961	1	SCREW -(Oil Pump Screen)
523	692101	1	DIPSTICK
524	691870	1	SEAL, O-Ring -(Dipstick Tube)
525	692093	1	TUBE, Dipstick
596	807389	2	SCREW -(Oil Pump)
737	84006523	3	SCREW -(Oil Filter Adapter)
842	692053	1	SEAL, O-Ring -(Dipstick Cap)
988	692063	1	GASKET, Oil Adapter
1017	843960	1	SCREEN, Oil Pump
1024	843959	1	PUMP, Oil
1027	842921	1	FILTER, Oil
1028	808235	1	ADAPTER, Oil Filter

